


Sandusky Cabinets, Inc.

THREE POINT LOCKING ASSEMBLY INSTRUCTION SHEET

Thank you for purchasing this American made cabinet by Sandusky. The all steel welded construction will give you years of dependable service.

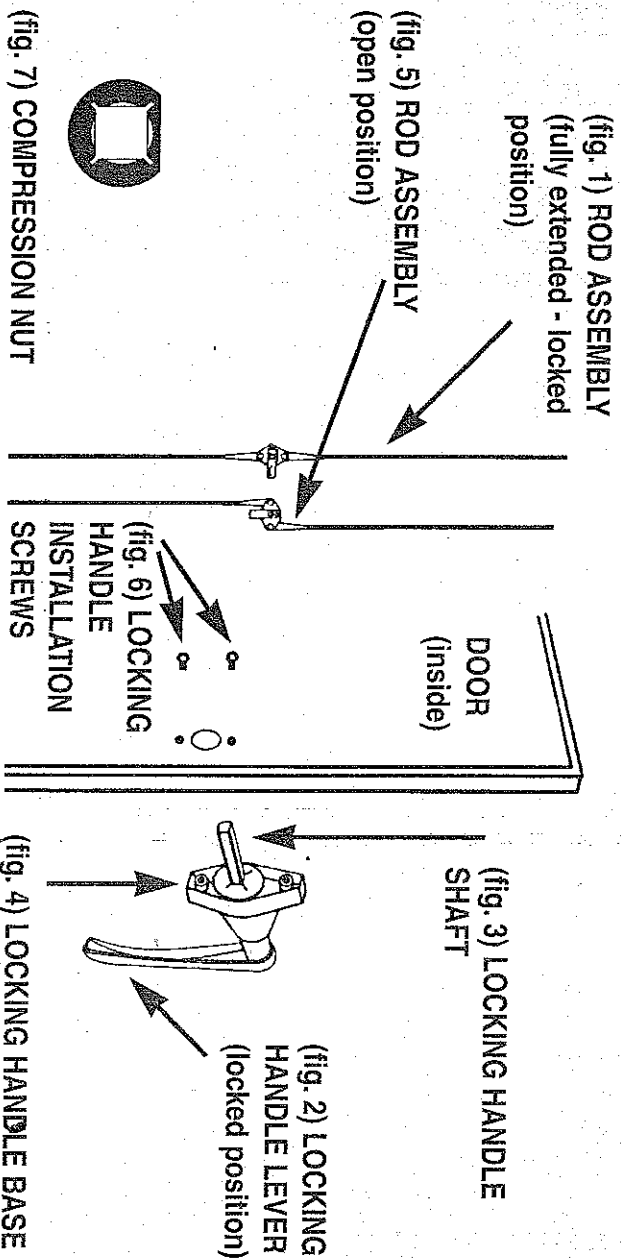

Tools Required: One regular screwdriver.

1. Turn the rod assembly to its fully extended position (fig. 1). This is the locked position. Insert the rods through the plastic glides in the top and bottom of the door with the raised portion and set screw in the center of the rod assembly facing you.
 5. The rods will secure the door at the top and bottom and the off-set cam will position behind the left door.
 6. The left door handle has no working mechanism. It attaches to the left door with 2 installation screws provided. **Certain models don't have a left door handle.**
2. With the locking lever in the locked position (fig. 2) insert the locking handle shaft (fig. 3) through the outside of the door and through the hole in the center of the rod assembly. Push the center of the rod assembly firmly against the locking handle base (fig. 4) and secure with the set screw.
3. Turn the locking handle lever counter-clockwise so that it is parallel to the floor with the rods in the open position
4. Push the compression nut (fig. 7) on the shaft and firmly against the cam. Make sure the flat side of the compression nut (fig. 7) faces right against the tongue of the cam.
5. Secure the locking handle base to the door with the locking handle installation screws (fig. 6).
6. Push the compression nut (fig. 7) on the shaft and firmly against the cam. Make sure the flat side of the compression nut (fig. 7) faces right against the tongue of the cam.

MA030601